



**Wireless module/WiFi product  
VM300/VM5G/VBG1200/VAP11AC**

Quick Setting Guide

## Declaration

Copyright © 2023 Shenzhen HouTian Network Communication Technology Co.,Ltd

All rights reserved, with retained ownership Without Shenzhen HouTian Network communication Technology Co.,Ltd written authorization, any company or personal can't copy, writer or translation part or all contents. Can't do commodity distribution for any commercial or profitable purposes by any ways(electricity, mechanical, photoprint, record or other methods).

VONETS is the registered trademark of Shenzhen HouTian Network Communication Technology Co.,Ltd. The other all trademarks or registered trademarks mentioned in this documents are belong to the individual owners. The product specifications and information technology mentioned in this manual are just for reference, if any updates, without other notice. Except for special agreements, this manual is just for user guidance, any statements, information and so on in this manual can't constitute the warranty of any forms.

## Product application and secondary development precautions

### 1. Problems related to wireless interference:

1.1 Use the ping command to test the wireless transmission performance. If it is found that the delay of the ping packet response is extremely uneven, and there are many responses with a large delay, it can basically be judged that the wireless has been strongly interfered;

1.2 The product antenna should be kept as far away as possible from sources of interference, such as switching power supplies, antennas of other modules or wireless products, etc.;

1.3 If it is too close to the antenna of other wireless products, it will cause mutual interference, resulting in an increase in the transmission bit error rate and a slower transmission rate. At this point, the wireless signal must be properly attenuated. The methods of attenuating the signal include adding obstacles, extending the distance, and adding a resistor in series between the antenna feed point and the antenna, etc., to meet the actual application requirements;

2. Selecting a suitable power supply is the key to good and stable wireless transmission and stable operation of the product. Improper power supply will cause damage to the product or poor wireless performance. The selected power supply must meet the voltage range and input power requirements of the power supply input, and the ripple must be less than the required maximum power supply ripple (100mV);

## Form 1

Transmission Distance Parameters Form			
Model	No-barrier point to point Transmission Distance	Transmission Rate (Mbps)	Band
VM300	80m--100m	300	
VM5G/VBG1200/VAP11AC	600m--700m	300+900	5G

## Form2

Power Supply Parameters List			
Model	Power Supply Voltage	Input Power	Typical Power Supply
VM300	DC5V--15V	$\geq 5W$	5V/1A
VM5G/VBG1200	DC5V--15V	$\geq 10W$	5V/2A
VAP11AC	DC5V--24V		

## Contents

<b>Chapter 1 Application Mode .....</b>	<b>1</b>
1.1 Bridge + Repeater Mode .....	1
1.2 Router Mode .....	2
<b>Chapter 2 Bridge+Repeater Mode Configuration Instruction .....</b>	<b>3</b>
2.1.1 Device Connection .....	3
2.2 Bridge+Repeater Application Configuration .....	4
2.3 AP Application Configuration .....	7
<b>Chapter 3 Router Mode Configuration Instruction .....</b>	<b>9</b>
3.1 Change device mode .....	9
3.2 WAN port setting.....	11
3.2.1 WAN/LAN exchange .....	11
3.2.2 WAN Port connection method .....	12
3.2.3 WAN port wired connect network——DHCP .....	12
3.2.4 WAN port wired connect network——PPPoE .....	13
3.2.5 WAN port wireless connect network--- WiFi .....	13
3.3 Set WiFi hotspot parameters .....	15
<b>Appendix Frequently Asked Questions .....</b>	<b>17</b>


## Chapter 1 Application Mode

### 1.1 Bridge + Repeater Mode

There are three application modes for the bridge mode of VONETS module/WiFi product: WiFi repeater, WiFi bridge and WiFi AP.


- **WiFi Repeater:**

VONETS module/WiFi product as WiFi Repeater, it must be configured to source WiFi hotspot parameters, can be used to extend the wireless signal coverage of existing APs or wifi router .

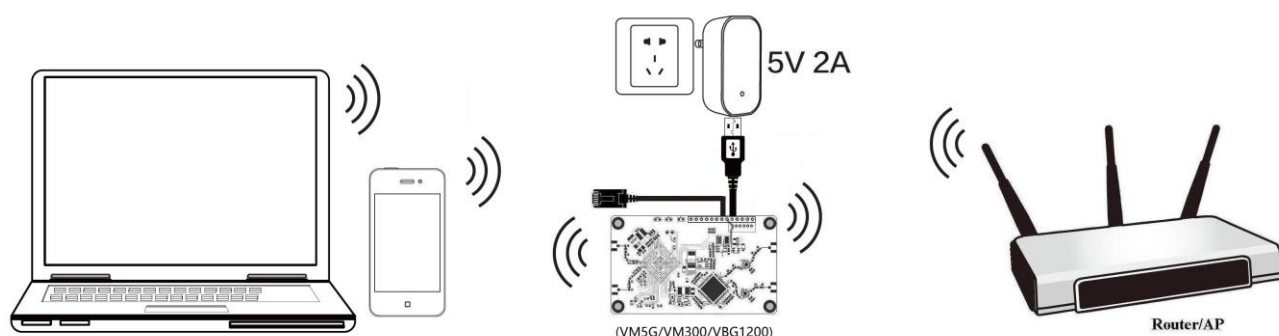


- **WiFi Bridge:**

VONETS module/WiFi product as WiFi bridge, it must be configured to source WiFi hotspot parameters, can be used for devices only with Ethernet ports to access wireless networks.

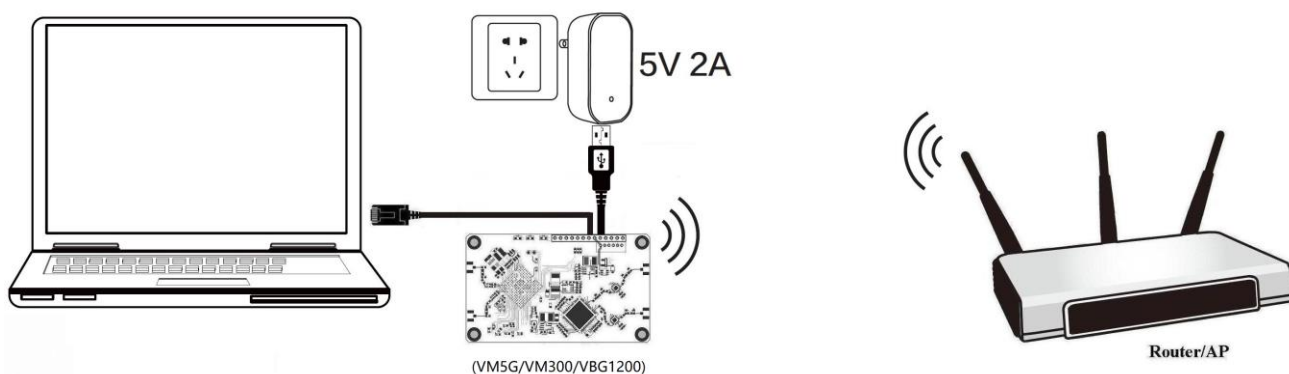


- **WiFi AP:**

VONETS module/WiFi product as WiFi AP, it can achieve wireless access to wired LAN, no configuration required, plug and play.

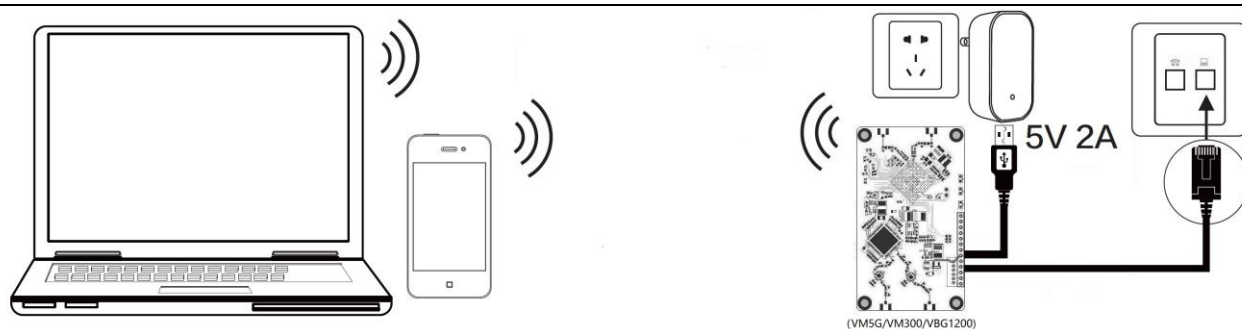


## 1.2 Router Mode


- VONETS module/WiFi product as WiFi router  
The Ethernet port of **VM300** module/ **VAP11AC** finished product defaults to WAN port. The Ethernet cable defaults to the LAN port. WAN and LAN ports are interchangeable.

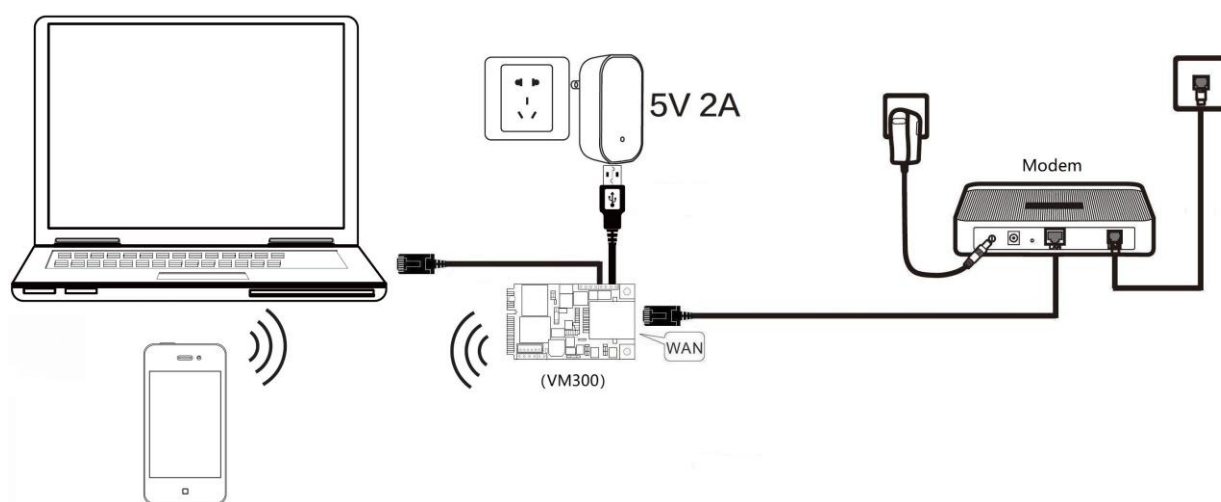

The Ethernet cable of **VM5G** module/**VBG1200** WiFi product defaults to LAN port, you must set “WAN/LAN interchange” so that the Ethernet cable is WAN port to use the broadband dialing function.

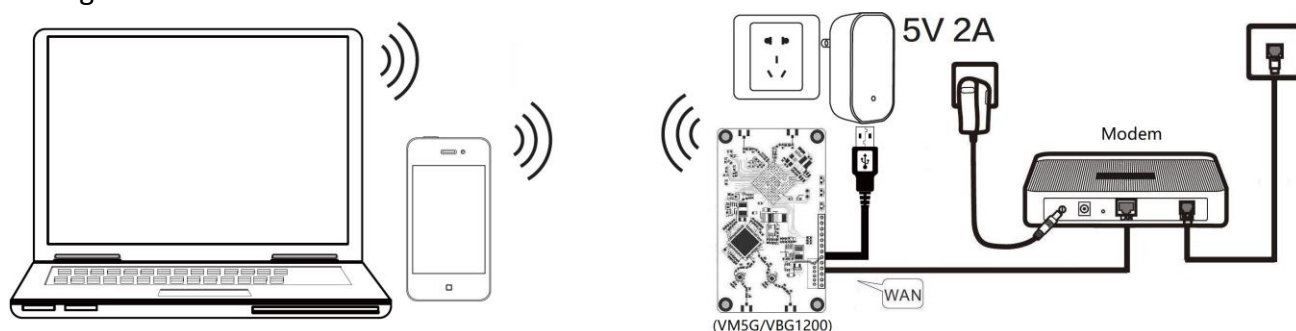

- VONETS module/WiFi product is used as a wireless router. WAN port can be set to connect to the WiFi hotspot for use as a secondary router.

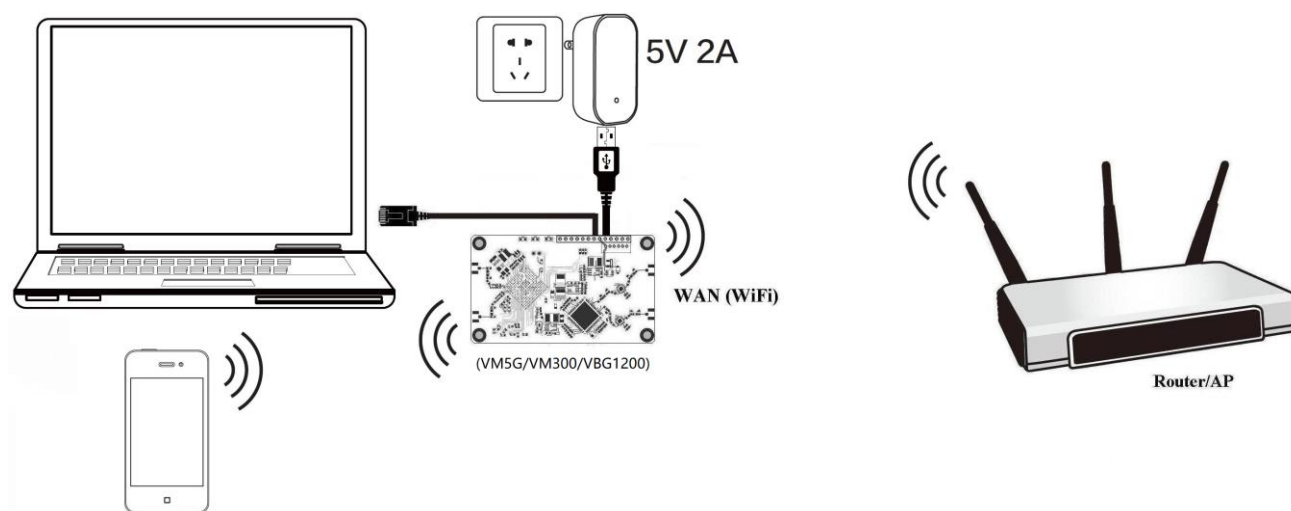


## Chapter 2 Bridge+Repeater Mode Configuration Instruction

### 2.1 Method 1: Log in to the device's Web configuration page to configure

#### 2.1.1 Device Connection

Power on VONETS module/WiFi product by 5V/2A power supply, then connect to PC, there are two connection ways as below:

- A. Computer is wired connected to LAN port of VONETS module/WiFi product;

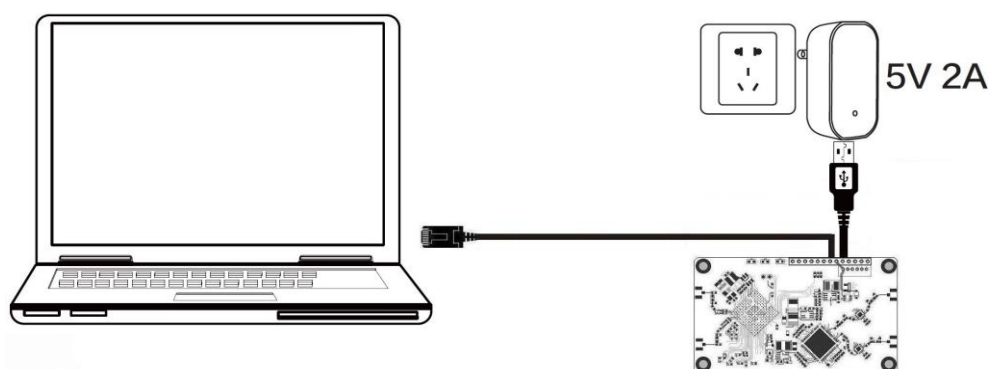


(Recommend Method)

- B. The computer wirelessly connects to the WiFi signal of VONETS module/WiFi product, its default hotspot parameters are as follows:

WiFi SSID: VONETS\_\*\*\*\*\* (corresponding to VONETS device MAC address)

WiFi password: 12345678

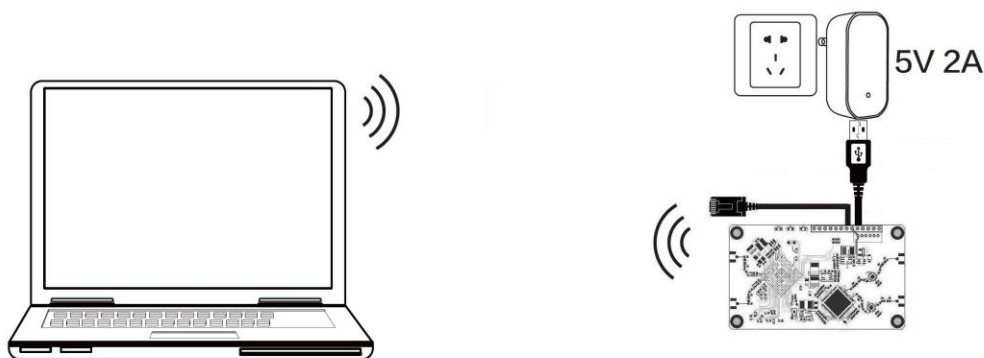


(After the WiFi parameters are configured, the WiFi will be disconnected, that is normal.)


## 2.2 Bridge+Repeater Application Configuration

The configuration steps of VONETS module/WiFi product for WiFi repeater and WiFi bridge are basically the same, so this manual combines the configuration instructions of the two application modes.

1. After computer is connected to VONETS module/WiFi product, open browser, input configured page: <http://vonets.cfg> (or IP: 192.168.254.254), then press Enter;

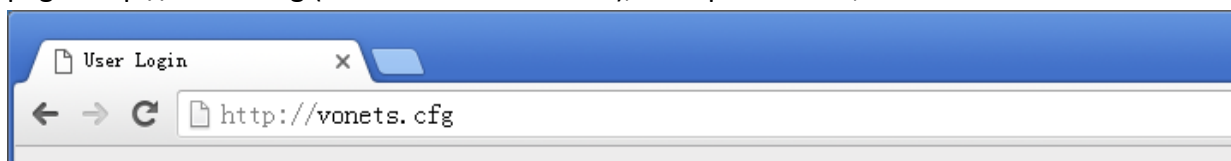

2. Input User name and Password in login page (both are “admin” ), click “Login” button to enter configured page;

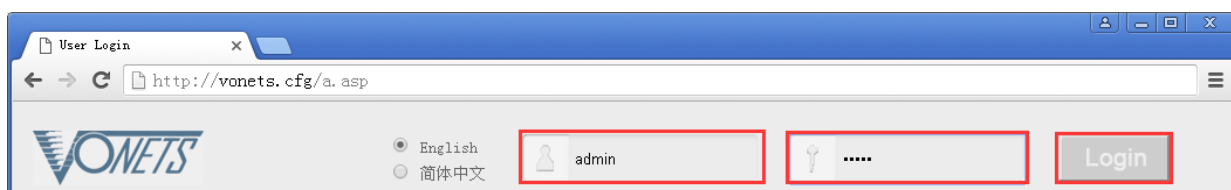

3. “Scan Hotspots” , choose the source hotspots, click “Next” ;



Select a Wireless Network to connect to. If not found, please click [Refresh List](#), or enter the SSID of the network manually. Then, click [Next](#).

SSID	MAC	Channel	Signal	Band
ChinaNet-2_4G-30B0	d8:32:14:30:30:b8	1	100	2.4G
H3C_VONETS_2_4G_34	00:17:13:26:02:34	1	100	2.4G
VONETS_2_4G_DFFA	00:17:13:10:df:fc	1	100	2.4G
ChinaNet-5G-30B0	d8:32:14:30:30:b2	149	100	5G
H3C_AC_2_4G_EE	00:17:13:10:e1:f0	1	81	2.4G
H3C_VONETS_2_4G	48:7a:da:cf:cb:b1	1	81	2.4G
VONETS_5G_DFFA	00:17:13:10:df:fa	157	78	5G
0xE58D5EE69DB0E8BDA9	04:95:e6:5c:df:b1	6	76	2.4G
H3C_AC_5G_30	00:17:13:10:c2:30	149	65	5G

there are 34 wireless network

[Refresh List](#)

[Next](#) [Exit](#)

4. Input “Source wireless hotspot password” , click “Apply” ;

- **IP layer transparent transmission** (factory default), transparent transmission of IP layer data, can meet most of WiFi bridge applications;
- **MAC layer transparent transmission**, transparent transmission of all data above the MAC layer (link layer) and MAC layer, including IP layer data. MAC transparent transmission can solve some special applications for MAC layer encryption, such as GoPro camera, Cisco AP, Hikvision monitoring system, etc;
- The option “**The configuration parameters of WiFi repeater security is synchronized with source hotspot**” is default ticked, it means the SSID of VONETS repeater is associated with the SSID of the source hotspot, and the WiFi password is the same as the password of the source hotspot;
- **Disable hotspot**, if you select “Disable hotspot” on the right side of the SSID, the device will not transmit the corresponding hotspot and can only be used as a bridge application;
- **Advanced Setting**, include Hot spot authentication match mode, WiFi Signal Motion Detection and SSA Signal strength alarm threshold, these options here can be kept unchanged, for instructions on this option, go to [www.vonets.com](http://www.vonets.com) and download the “V Series WiFi Bridge Advanced Features Instruction” ;

## VONETS - Wireless Module/Finished Product

Operative Status	<b>WiFi Hotspots</b>
Operating Mode	
Scan Hotspots >>	
WiFi Repeater	
System Settings	
LAN Settings	<b>Security Settings</b>
	SSID: ChinaNet-5G-30B0
	Source WiFi hotspot password: <input type="password"/>
	Transmission mode: <input checked="" type="radio"/> IP layer transparent <input type="radio"/> MAC layer transparent
	<input checked="" type="checkbox"/> The configuration parameters of WiFi repeater security is synchronized with source hotspot
	2.4G WiFi Repeater SSID: ChinaNet-5G-30B0_2.4G_CA <input type="checkbox"/> Disable Hotspot <input checked="" type="checkbox"/> Disable WiFi Hardware
	5G WiFi Repeater SSID: ChinaNet-5G-30B0_5G_CA <input type="checkbox"/> Disable Hotspot
	<b>DHCP Server Settings</b>
	DHCP Server: <input checked="" type="radio"/> Disable (Recommended configuration) <input type="radio"/> Enable
	<b>Advanced Setting ( For specific applications only ) &gt;&gt;</b>
	<p>In order to prevent network conflicts, after parameters are configured, please disable DHCP server. Logging in page again will be failed because of 'Disable DHCP server', so please make sure the hotspot parameters are correct.</p> <div><input checked="" type="button" value="Apply"/> <input type="button" value="Back"/></div>

5. Click “Reboot” , VONETS module will connect to the configured WiFi hotspot automatically, if connection is successful, the WiFi LED light will flash quickly;

Operative Status	<b>WiFi Hotspots</b>
Operating Mode	
Scan Hotspots >>	
WiFi Repeater	
System Settings	
LAN Settings	<b>Security Settings</b>
	SSID: ChinaNet-5G-30B0
	Source WiFi hotspot password: Abc.12345
	Transmission mode: <input checked="" type="radio"/> IP layer transparent <input type="radio"/> MAC layer transparent
	<input checked="" type="checkbox"/> The configuration parameters of WiFi repeater security is synchronized with source hotspot
	2.4G WiFi Repeater SSID: ChinaNet-5G-30B0_2.4G_CA <input type="checkbox"/> Disable Hotspot <input checked="" type="checkbox"/> Disable WiFi Hardware
	5G WiFi Repeater SSID: ChinaNet-5G-30B0_5G_CA <input type="checkbox"/> Disable Hotspot
	<b>DHCP Server Settings</b>
	DHCP Server: <input checked="" type="radio"/> Disable (Recommended configuration) <input type="radio"/> Enable
	<b>Advanced Setting ( For specific applications only ) &gt;&gt;</b>
	<p>If you want to add one more hotspot, please click “Continue Add” button.</p> <div><input type="button" value="Continue Add"/> <input type="button" value="To Connect"/></div> <p>To make the new parameters effective, after parameters are configured, please click “Reboot” button.</p> <div><input checked="" type="button" value="Reboot"/></div>


## Remark 1:

LED Light Form			
Model	Blue Light	Green Light	Yellow Light
VM300	WiFi Connection Status Light	Ethernet Cable Connection Status Light	/
VM5G/VBG1200/VAP11AC	WiFi Connection Status Light	5G WiFi Connection Status Light	Ethernet Cable Connection Status Light
<p>① VONETS module/WiFi product is not connected to any hotspot, WiFi connection status light will flash quickly;</p> <p>② VONETS module/WiFi product is connected to hotspot successfully, WiFi connection status light will quick flash;</p> <p>③ VONETS module/WiFi product is connected to hotspot successfully, but hotspot signal strength is less than 50% greater than 10%, WiFi status light will pause flash and flash;</p> <p>④ VONETS module/WiFi product is connected to hotspot failed, WiFi connection status light will flash slowly.</p>			

## 2.3 AP Application Configuration

VONETS module/WiFi product can be configured as an AP application. The wireless terminal device can connect to VONETS module/finished product hotspot to connect to the network; however, it is best to change its WiFi name and password for network security.

1. Log in to the configuration page <http://vonets.cfg> (or IP: 192.168.254.254) in your computer browser, both user name and password are “admin”

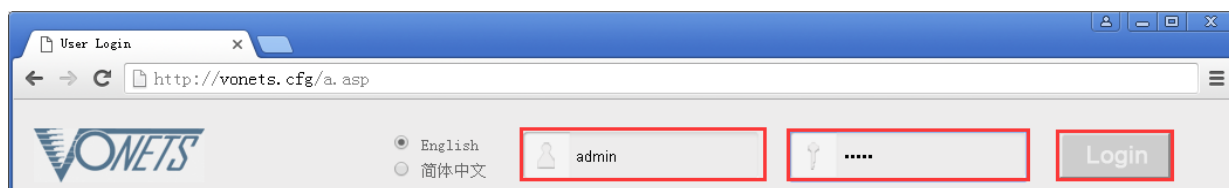

2. Revise WiFi name: Jump to “WiFi Repeater” ---- “Basic Settings”, enter new WiFi name in “WiFi Repeater (SSID)”, click “Apply”;

Operative Status

Operating Mode

Scan Hotspots

**WiFi Repeater >>**

System Settings

LAN Settings

**Basic Settings**   WiFi Security   WiFi Client

**2.4G Wireless Network**

WiFi Hardware Module ☒ Enable ☐ Disable

General Hotspot SSID **VONETS\_2.4G\_B5CA** Hidden ☐ Disable Hotspot ☐

Network Mode 11B/G/N ▼

Channel 2442MHz (Channel 7) ▼ ☐ Auto select the best channel

MAC Address 00:17:13:10:B5:CC

**5G Wireless Network**

WiFi Hardware Module ☒ Enable ☐ Disable

General Hotspot SSID **VONETS\_5G\_B5CA** Hidden ☐ Disable Hotspot ☐

Network Mode 11N ▼

Channel 5745MHz (Channel 149) ▼ ☐ Auto select the best channel

MAC Address 00:17:13:10:B5:CA

Modify the parameters, restart the device to take effect.

Apply Cancel

- Revise WiFi password, in “WiFi Repeater” ---- “WiFi Security” , enter new WiFi password in “Pass Phrase” , click “Apply” ;

Operative Status

Operating Mode

Scan Hotspots

**WiFi Repeater >>**

System Settings

LAN Settings

Basic Settings   **WiFi Security**   WiFi Client

**[2.4G] WiFi Security**

Repeater SSID VONETS\_2.4G\_B5CA ▼

Security Mode WPA2PSK-WPA2PSK ▼

WPA Algorithms ☐ TKIP ☒ AES ☐ TKIP-AES

Pass Phrase **12345678** (8-63 characters or 64 hex numbers)

**[5G] WiFi Security**

Repeater SSID VONETS\_5G\_B5CA ▼

Security Mode WPA2PSK-WPA2PSK ▼


WPA Algorithms ☐ TKIP ☒ AES ☐ TKIP-AES

Pass Phrase **12345678** (8-63 characters or 64 hex numbers)


Modify the parameters, restart the device to take effect.

Apply Cancel

- “WiFi Tx Power” of VONETS module/WiFi product can be changed, jump to “System Settings” ---- “Advance Settings” , choose suitable transmit power, then click “Apply” ;

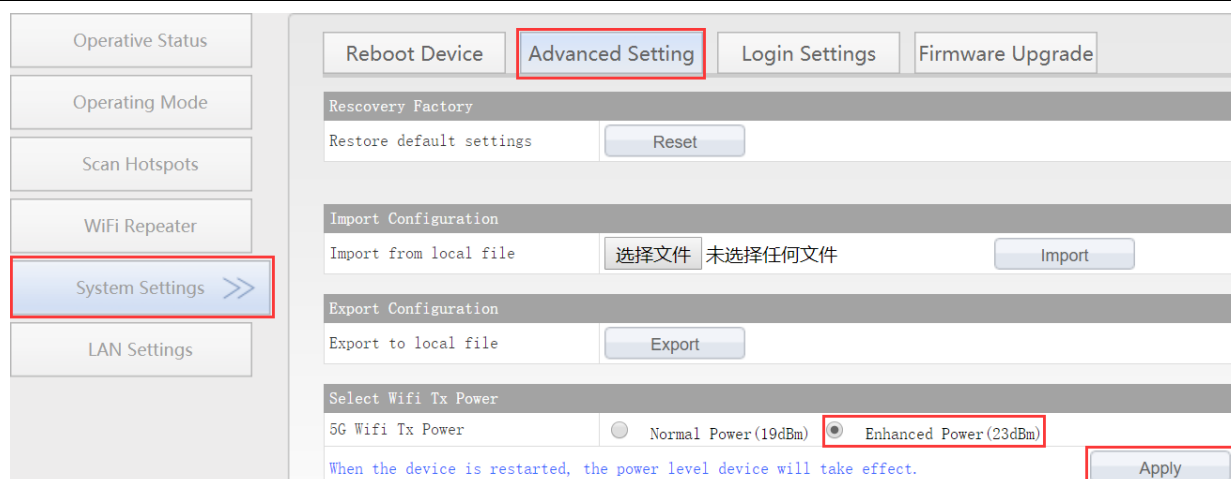

5. Reboot device, jump to “System Settings” ---- “Reboot Device” , click “Reboot” , when it is finished, all revised options will take effort.

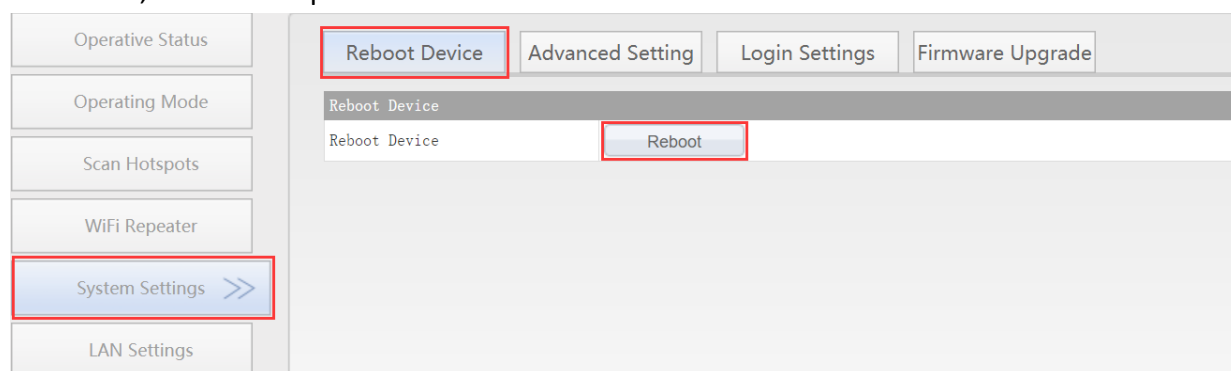


Remark 2: When VONETS module/WiFi product connect to external network, its IP address will be changed. At this time, when log in configured page, we suggest you enter configured domain name: <http://vonets.cfg>. Or in Windows command window, enter the command: `ping vonets.cfg`, to get the IP address of the device, then log in configuration page by this IP address.

## Chapter 3 Router Mode Configuration Instruction

### 3.1 Change device mode

1. Power on VONETS module/WiFi product by 5V/2A power supply, then connect to PC, there are two connection ways as below:
  - A. Computer is wired connected to LAN port of VONETS module/WiFi product;

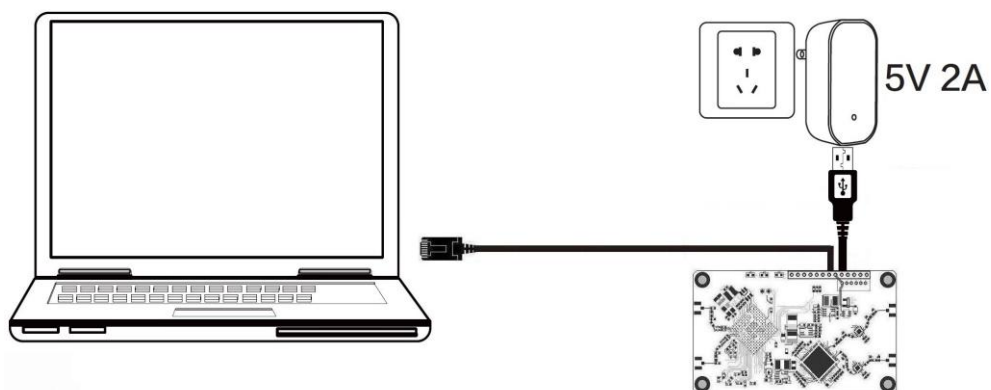


(Recommend Method)

- B. Computer wirelessly connects to the WiFi signal of VONETS module/WiFi product, its default hotspot parameters are as follows:


WiFi SSID: VONETS\_\*\*\*\*\* (corresponding to VONETS device MAC address)

WiFi password: 12345678

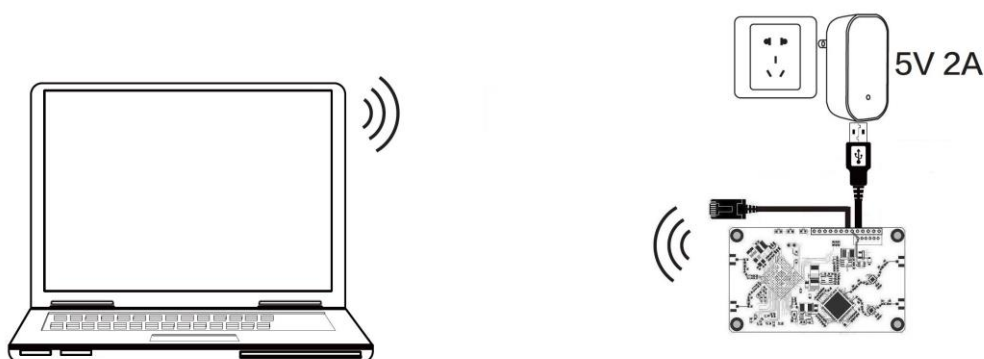


(After the WiFi parameters are configured, the WiFi will be disconnected, that is normal.)


2. After computer is connected to VONETS module/WiFi product, open browser, input configured page domain name: <http://vonets.cfg> (or IP: 192.168.254.254), then press Enter;

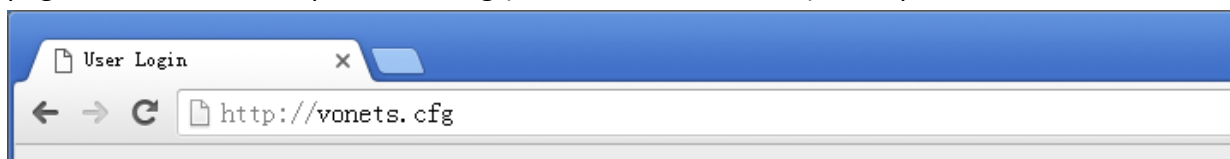


3. Enter User name and Password in login page (both are “admin” ), click “Login” button to enter configured page;

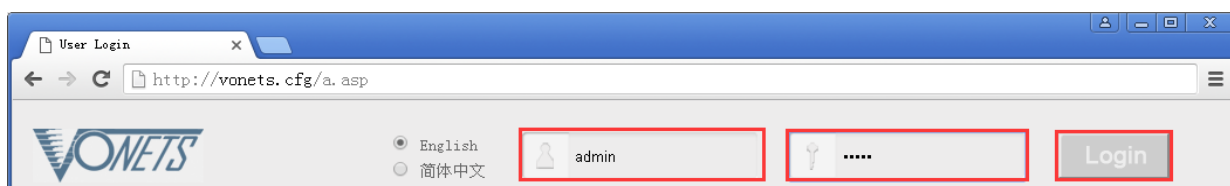

4. In “Operating Mode” , change Device mode to “Router” mode, click “Apply” button;

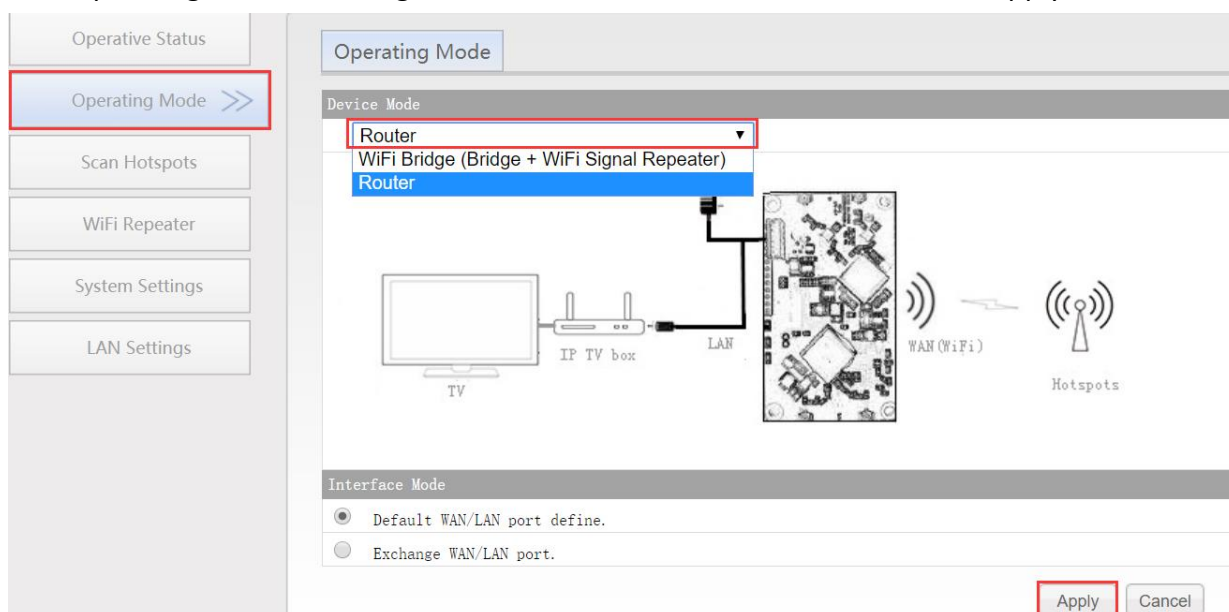

5. Reboot device: go to “System Settings” -- “Reboot device” , click “Reboot” button, VONETS module/WiFi product will automatically switch to router mode.

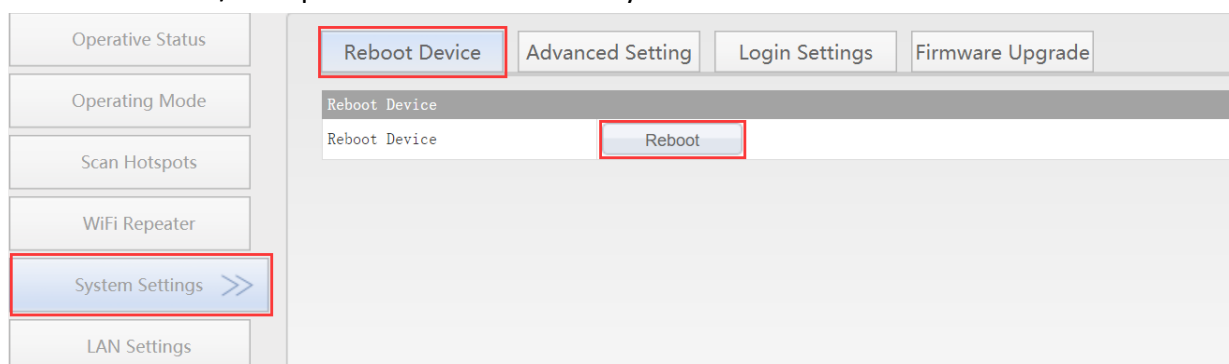


## 3.2 WAN port setting

### 3.2.1 WAN/LAN exchange

In routing mode, the Ethernet port of VONETS module/WiFi product is divided into a WAN port and a LAN port, and WAN/LAN can be interchanged.

The Ethernet port of **VM300** module / **VAP11AC** finished product defaults to WAN port. The Ethernet cable defaults to LAN port. If the interface mode is changed to “WAN/LAN exchange” , the Ethernet cable will be WAN port and the Ethernet port will be LAN port.(This option can keep unchanged);

The Ethernet cable of **VM5G/VBG1200** WiFi product defaults to LAN port, the interface mode must be changed to “WAN/LAN interchange” to make Ethernet cable to WAN port, click “Apply” , then reboot VONETS module/WiFi product.

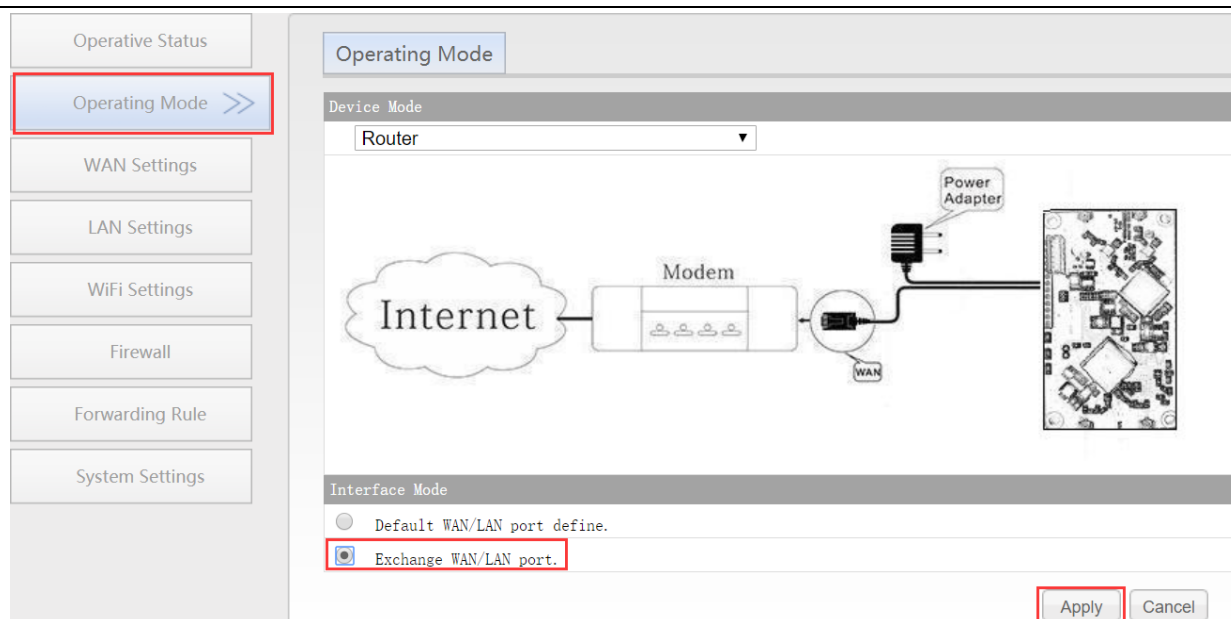

### 3.2.2 WAN Port connection method

By setting the WAN port of the router, you can change the network connection type according to the actual needs of the individual, there are three types of WAN port connections commonly used in the routing mode of the VONETS module/WiFi product: DHCP(Auto Config), PPPoE(ADSL) and WiFi. DHCP and PPPoE are wired connections, and the WAN port needs to be connected to the source network through a wired connection:

- DHCP(Auto Config): WAN port connection type is selected as “**DHCP(Auto Config)**”, VONETS module/WiFi product will automatically obtain IP address from source network;
- PPPoE(ADSL): WAN port connection type is selected as “**PPPoE**”, that is, ADSL virtual dialing mode requires ISP (Internet Service Provider) to provide Internet account and password.
- WiFi: WAN port connection type is selected as “**WiFi**”, VONETS module/WiFi product uses a built-in WiFi network card (used to connect to the source hotspot) as a WAN port, and all Ethernet ports as LAN ports, while providing WiFi hotspot functions.

### 3.2.3 WAN port wired connect network——DHCP

The default WAN port connection mode of VONETS is DHCP. The WAN port can automatically obtain an IP address after connecting with the source network.



The screenshot shows the 'Basic Settings' tab in the VONETS configuration interface. On the left sidebar, 'WAN Settings' is highlighted with a red box and a double arrow. The main content area shows the 'WAN Connection Type' section with 'Connection Type' set to 'DHCP (Auto config)' (highlighted with a red box). Below this, 'Remote Management' is set to 'Disable'. The 'DHCP Mode' section shows 'Hostname' as 'VONETS.COM'. The 'MAC Clone' section has an empty 'MAC Address' field and a 'Get PC MAC' button. At the bottom, there is a note: 'Modify the parameters, restart the device to take effect.' and 'Apply' and 'Cancel' buttons.

### 3.2.4 WAN port wired connect network——PPPoE

In “WAN settings” , select “Basic settings” , change the connection type to “PPPoE (ADSL)” , then enter the Internet account and password provided by the ISP (Internet Service Provider), click the “Apply” button, and then reboot VONETS module/WiFi product, then can access to network.

The screenshot shows the 'Basic Settings' tab in the VONETS configuration interface. On the left sidebar, 'WAN Settings' is highlighted with a red box and a double arrow. The main content area shows the 'WAN Connection Type' section with 'Connection Type' set to 'PPPoE (ADSL)' (highlighted with a red box). Below this, 'Remote Management' is set to 'Disable'. The 'PPPoE Mode' section shows 'User Name' as '15278511540@163.sz.com' and 'Password' as '\*\*\*\*\*' (both highlighted with red boxes). The 'Operation Mode' is set to 'Always on'. Below this, 'Always on mode: Redial Period' is set to '60' seconds and 'Dial on Demand mode: Idle Time' is set to '5' minutes. The 'MAC Clone' section has an empty 'MAC Address' field and a 'Get PC MAC' button. At the bottom, there is a note: 'Modify the parameters, restart the device to take effect.' and 'Apply' and 'Cancel' buttons. The 'Apply' button is highlighted with a red box.

### 3.2.5 WAN port wireless connect network---- WiFi

1. In “WAN Settings” , select “Basic Settings” , change Connection type to “WiFi” , then click “Scan Hotspots” to enter the scanning hotspot list.

Operative Status

Operating Mode

WAN Settings >>

LAN Settings

WiFi Settings

Firewall

Forwarding Rule

System Settings

Basic Settings DDNS

WAN Connection Type

Connection Type WIFI

Remote Management ☒ Disable ☐ Enable

WiFi Mode

SSID

MAC Address

Security Mode

Encryption Type

Channel

Connection Status Disconnected

Scan Hotspots Scan Hotspots

MAC Clone

MAC Address Get PC MAC

Modify the parameters, restart the device to take effect.

Apply Cancel

## 2. Choose the source hotspots, click “Next” ;

Operative Status

Operating Mode

WAN Settings

LAN Settings

WiFi Settings >>

Firewall

Forwarding Rule

System Settings

Basic Settings WiFi Security WiFi Client

Select a Wireless Network to connect to. If not found, please click [Refresh List](#), or enter the SSID of the network manually. Then, click [Next](#).

SSID	MAC	Channel	Signal	Band
VONETS_2_4G_DFFA	00:17:13:10:df:fc	1	100	2.4G
ChinaNet-2_4G-30B0	d8:32:14:30:30:b8	1	100	2.4G
H3C_AC_2_4G_EE	00:17:13:10:c1:f0	1	100	2.4G
H3C_VONETS_2_4G_34	00:17:13:26:02:34	1	100	2.4G
ChinaNet-5G-30B0	d8:32:14:30:30:b2	149	100	5G
H3C_VONETS_2_4G	48:7a:da:cf:cb:b1	1	91	2.4G
H3C_AC_5G_30	00:17:13:10:c2:30	149	83	5G
VONETS_5G_DFFA	00:17:13:10:df:fa	157	78	5G
VONETS_INIT_2G4	00:17:13:10:d3:d2	7	65	2.4G

there are 39 wireless network

Refresh List

SSID

Next Exit

## 3. Input “Source wireless hotspot password” , click “Apply”

- The option “**The configuration parameters of WiFi repeater security is synchronized with source hotspot**” is default ticked, it means the SSID of VONETS repeater is associated with the SSID of the source hotspot, and the WiFi password is the same as the password of the source hotspot;
- **Disable hotspot**, if you select “Disable hotspot” on the right side of the SSID, the device will not transmit the corresponding hotspot and can only be used as a bridge application;
- **Advanced Setting**, include Hot spot authentication match mode, WiFi Signal Motion Detection and SSA Signal strength alarm threshold, these options here can be kept unchanged, for instructions on this option, go to [www.vonets.com](http://www.vonets.com) and download the “V Series WiFi Bridge Advanced Features Instruction” ;

The screenshot shows the VONETS configuration interface. On the left is a sidebar with menu items: Operative Status, Operating Mode, WAN Settings, LAN Settings, WiFi Settings (highlighted with a blue bar and double arrows), Firewall, Forwarding Rule, and System Settings. The main area has three tabs: Basic Settings, WiFi Security (selected), and WiFi Client. Under the WiFi Security tab, there's a 'Security Settings' section with fields for SSID (ChinaNet-5G-30B0), Source WiFi hotspot password (highlighted with a red box), and checkboxes for synchronization. Below this are fields for 2.4G and 5G WiFi Repeater SSIDs and 'Disable Hotspot' checkboxes. At the bottom right, the 'Apply' button is highlighted with a red box, next to a 'Back' button.

- Click “Reboot”, VONETS module/WiFi product will connect to the configured WiFi hotspot automatically, if connection is successful, the WiFi LED light will flash quickly;(Please refer to Remark 1 for the description of the LED light.)

This screenshot shows the same VONETS configuration interface as before, but the 'Source WiFi hotspot password' field now contains the text 'Abc.12345'. At the bottom of the main area, there is a section with instructions and two buttons: 'Continue Add' and 'To Connect'. Below these, a 'Reboot' button is highlighted with a red box. The sidebar and other UI elements remain the same.

**Remark 3:** After VONETS module/WiFi product sets the WAN port to access the WiFi hotspot in the routing mode, its LAN port IP is still 192.168.254.254, and the terminal device also obtains the IP address of the same network segment, can login configuration page by 192.168.254.254 or <http://vonets.cfg>.

### 3.3 Set WiFi hotspot parameters

- Revise WiFi name: Jump to “WiFi Repeater” ---- “Basic Settings”, enter new WiFi name in “WiFi Repeater (SSID)”, click “Apply”;

Operative Status

Operating Mode

WAN Settings

LAN Settings

**WiFi Settings >>**

Firewall

Forwarding Rule

System Settings

**Basic Settings** | WiFi Security | WiFi Client

2.4G Wireless Network

WiFi Hardware Module ☒ Enable ☐ Disable

General Hotspot SSID **VONETS\_2.4G\_B5CA** Hidden ☐ Disable Hotspot ☐

Network Mode 11B/G/N ▼

Channel 2442MHz (Channel 7) ▼ ☐ Auto select the best channel

MAC Address 00:17:13:10:B5:CC

5G Wireless Network

WiFi Hardware Module ☒ Enable ☐ Disable

General Hotspot SSID **VONETS\_5G\_B5CA** Hidden ☐ Disable Hotspot ☐

Network Mode 11N ▼

Channel 5745MHz (Channel 149) ▼ ☐ Auto select the best channel

MAC Address 00:17:13:10:B5:CA

Modify the parameters, restart the device to take effect.

**Apply** Cancel

- Revise WiFi password, in “WiFi Repeater” ---- “WiFi Security” , enter new WiFi password in “Pass Phrase” , click “Apply” ;

Operative Status

Operating Mode

WAN Settings

LAN Settings

**WiFi Settings >>**

Firewall

Forwarding Rule

System Settings

**Basic Settings** | **WiFi Security** | WiFi Client

[2.4G] WiFi Security

Repeater SSID VONETS\_2.4G\_B5CA ▼

Security Mode WPAPSK-WPA2PSK ▼

WPA Algorithms ☐ TKIP ☒ AES ☐ TKIP-AES

Pass Phrase **12345678** (8-63 characters or 64 hex numbers)

[5G] WiFi Security

Repeater SSID VONETS\_5G\_B5CA ▼

Security Mode WPAPSK-WPA2PSK ▼

WPA Algorithms ☐ TKIP ☒ AES ☐ TKIP-AES

Pass Phrase **12345678** (8-63 characters or 64 hex numbers)

Modify the parameters, restart the device to take effect.

**Apply** Cancel

- Reboot device, jump to “System Settings” ---- “Reboot Device” , click “Reboot” , when it is finished, all revised options will take effect.

Operative Status

Operating Mode

WAN Settings

LAN Settings

WiFi Settings

Firewall

Forwarding Rule

**System Settings >>**

**Reboot Device** | Advanced Setting | Login Settings | Firmware Upgrade

Reboot Device

Reboot Device **Reboot**

## Appendix Frequently Asked Questions

1. How to restore the factory default parameters of the VONETS module/WiFi product?  
Please refer to the information below to reset the factory default parameters of the VONETS module/WiFi product:  
VM300: [http://www.vonets.com/serviceView.asp?D\\_ID=213](http://www.vonets.com/serviceView.asp?D_ID=213)  
VM5G: [http://www.vonets.com/serviceView.asp?D\\_ID=306](http://www.vonets.com/serviceView.asp?D_ID=306)  
VBG1200: After the device is powered on for about 60 seconds, press and hold the Reset button for 5 seconds and then release, the blue indicator light will flash a few times, and then the device will automatically restore the factory default parameters (the restoring process takes about 80 seconds). During operation, the product cannot be powered down, otherwise it may cause damage to the product.
2. Does VONETS module/WiFi product support firmware upgrade, how to upgrade?  
VONETS module/WiFi product supports firmware upgrade, and support online upgrade, please visit website: [www.vonets.com](http://www.vonets.com) to refer to the related documents.
3. The device WiFi hot spot can be found, but the smart phone or PC can't connect to this device hotspot?
  - Reason 1. Due to some unexpected operation or power down, caused the destroy of device parameters. At this time, just need to reset the device to factory default parameters;
  - Reason 2. The device WiFi doesn't work at the best channel, make the performance worse. At this time, you can try to change the source WiFi hot spot and this device WiFi channel to make the performance better;
  - Reason 3. The smart phone or PC haven't been configured the correct WiFi password.
4. The device has been configured the source WiFi hot spot parameters, the smart phone or PC has connected to the device WiFi hot spot, but still doesn't get internet?
  - First, check the status light to know the current state of the device, then according to the state of the device to analyze the fault reasons;
  - Reason 1. The distance between the device and source WiFi hot spot is too long, cause the communication performance degradation, finally effect the user's access to the Internet. At this time, just need shorten the distance between the device and source WiFi hot spot to solve this problem;
  - Reason 2. Due to some unexpected operation or power down, caused the destroy of device parameters. At this time, just need to reset the device to factory default parameters;

- Reason 3. The device WiFi doesn't work at the best channel, make the performance worse. At this time, you can try to change the source WiFi hot spot WiFi channel to make it the same as the default channel of the device, the reboot the device, the device will automatically exchange to the same channel as the source WiFi hotspot, to make the performance better;
  - Reason 4. There are several WiFi hot spot around the device, WiFi channel mutual interference, make the performance worse. At this time, you can try to change the source WiFi hot spot and this device WiFi channel to make the performance better;
  - Reason 5. The configured source WiFi hot spot parameters are not correct. At this time, just need to configure the correct parameters then reboot the device;
5. The smart phone or PC has been connected the device by WiFi or Ethernet cable, but user can't log in the device WEB page, or after log in the WEB it shows error?
- Reason 1. The users don't use the browser recommended by VONETS(IE,Google Chrome, Safari, the mobile phone browser);
  - Reason 2. The smart phone or PC installed the firewall, the security level is set too high, caused the above problem. At this time, only need to close the firewall;
  - Reason 3. The security level of browser is too high, it will also cause the above problem. At this time, just need to reduce the browser's security level, then log in again;
  - Reason 4. The IP address of the device input error. For the new device from the factory, user only need input the correct IP address according to the instruction guide; for the device that has connected the source hot spot, user only operate according to <Remark 2>.

## **FCC STATEMENT :**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

## **FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Operation of this device in the band 5150-5250 MHz is restricted to indoor use only