## 300M Mini WiFi Router

# VAR11N PLUS

Quick Setting Guide

### Declaration

#### **Copyright © 2014 Shenzhen HouTian Network Communication Technology Co., Ltd**

#### All rights reserved, with retained ownership

Without Shenzhen HouTian Network Communication Technology Co., Ltd written authorization, any company or personal can't copy, writer or translation part or all contents. Can't do commodity distribution for any commercial or profitable purposes by any ways (electricity, mechanical, photoprint, record or other methods). **VONETS** is the registered trademark of Shenzhen HouTian Network Communication Technology Co., Ltd. The other all trademarks or registered trademarks mentioned in this documents are belong to the individual owners. The product specifications and information technology mentioned in this manual are just for reference, if any updates, without other notice. Except for special agreements, this manual is just for user guidance, any statements, information and so on in this manual can't constitute the warranty of any forms.

## VAR11N PLUS Quick Setting Guide

1. Connect VAR11N PLUS



Set computer IP address to automatically, please see the words in the red circle of The following picture:

You car this cap for the	Atternate Configuration in get IP settings assigned at bability. Otherwise, you nee appropriate IP settings.	utomatica ed to ask y	lly if ' our r	your n networ	etwork 'k admir	supports histrator
0	btain an IP address automa	tically				
O Us	se the following IP address:	and a				
IP address:			9	- 62		
Subnet mask: Default gateway:			÷	- K - K		
00	btain DNS server address a	utomatica		>		
OU	se the following DNS server	addresse	s:			
Preferred DNS server:		1	//	- KS	а <u>к</u>	
Alter	mate DNS server:	-	54 -	К.	×	
[]] V	alidate settings upon exit				Adv	anced

2. Open the IE browser, enter http://vonets.cfg virtual domain name setting (VDNS).

🖉 VAR11N_F	Plus - Windows Internet Explorer
<b>OO -</b>	http://vonets.cfg/

#### Remark:

Enter domain name, then Enter, the login page will appear, the default admin and password is admin.

#### 3. WAN Setting

Click WAN settings button, choose the correct connection Type, enter the User name and Password provided by ISP, click Apply, then ok, see the following picture:

WAN Settings	WAN Connection Type	
	Connection Type	PPPoE (ADSL)
, LAN Settings	Remote Management	⊙Disable ○Enable
	PPPoE Mode	
WiFi Settings >	User Name	
Firewall	Password	
1 Hondi H		Always on
Forwarding Rule >	Operation Mode	Always on mode: Redial Period 60 seconds Dial on Demand mode: Idle Time 5 minutes
System Setting >	MAC Clone	
	MAC Address	Get PC MAC

#### 4. LAN Setting

Enter webpage configuration, click LAN Setting, enable DHCP service, see the following pictures:

🖉 WAN Settings	LAN Setup		
	IP Address	192. 168. 253. 254	
LAN Settings >>	Subnet Mask	255. 255. 255. 0	
	MAC Address	00:17:13:15:75:F0	
WiFi Settings >	DHCP Server		
	DHCP Server	Enable 💌	
Firewall	Start IP Address	192. 168. 253. 100	
	End IP Address	192. 168. 253. 200	
Forwarding Rule >	Subnet Mask	255. 255. 255. 0	
System Setting	Default Gateway	192. 168. 253. 254	
ojocom ooccing y	Primary DNS Server		
	Secondary DNS Server		

Shenzhen Houtian Network Communication Technology Co.,Ltd

http://www.vonets.com