

How to connect USB male to supply power for VHA300

PB interface has a power supply function, user just need to let positive USB male connected PB No. 1 pin, and let the negative USB male connected PB No. 6 pin, as below picture:



1: VIN+ 6: GND

